

NOTES:

SMOOTH, CLEAN AND LEVEL BEARING SURFACES ARE REQUIRED FOR PROPER PLANK INSTALLATION. WALLS TO BE BE FURNISHED AND INSTALLED BY CUSTOMER OR THEIR GENERAL CONTRACTOR, NOT BOCCELLA. NO WALLS, PIPES, CONDUIT OR OTHER FIXTURES ARE TO EXTEND ABOVE THE PRECAST BEARING SURFACE UNTIL THE PLANKS HAVE BEEN SET INTO THEIR FINAL DESIGNED POSITION.

June 2009



Boccella Precast, LLC

324 New Brooklyn Road Berlin, New Jersey 08009

Phone: (856) 767-3861 Fax: (856) 767-7228 www.boccellaprecast.com

STANDARD DESIGN CATALOG

DRAWING DESCRIPTION:

TYPICAL END BEARING @ ELEVATOR CMU CONDITION

SCALE:

CATALOG:

3/4" = 1'-0"

PAGE 8